 
 


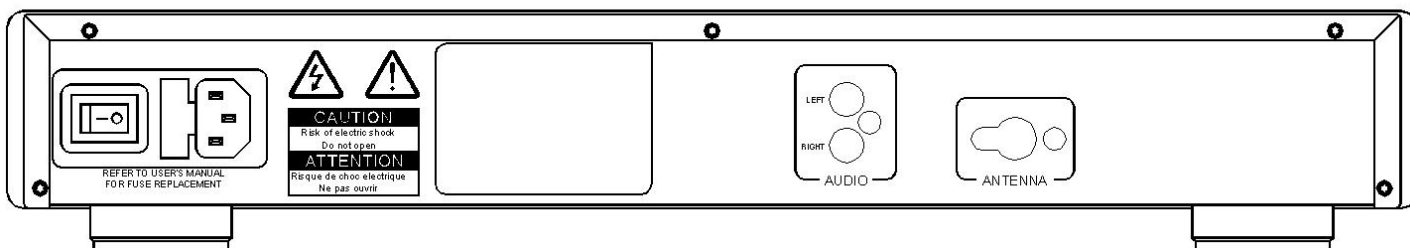

OWNER'S MANUAL

FM

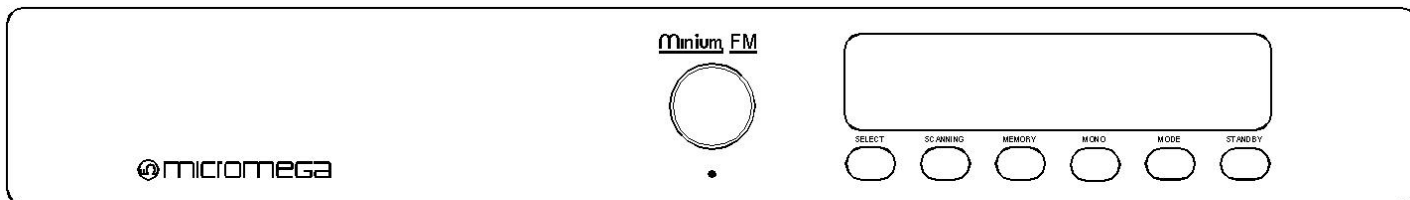

Dear Customer,
Thank you for purchasing FM tuner.
 This unit provides ease of use and sonics of the highest quality. Please pay close attention to this instruction manual, and read it fully before attempting to operate. It is designed to ensure that you maximise your pleasure of FM and familiarise you with its many unique functions.

CHECKING

- Check that the carton has no damage. Should you have any doubt about its condition, please do not hesitate to contact your dealer.

UNPACKING

- Very carefully remove the unit from the box, taking care to preserve all the packing material. In the unlikely event that your unit needs to be sent back to either your dealer or distributor, it must be sent in the original packing material. Failure to observe this will invalidate your warranty.

ACCESSORIES

Upon opening the carton, you should find the following accessories:

- Mains lead.
- Stereo Interconnect pair.

MAINS VOLTAGE

- Check that the mains voltage indicated on both the carton and the rear of the unit correspond to the local power supply
- If you are in any doubt, consult your dealer.

INSTALLATION

In order to obtain the maximum performance of FM, it is important to follow the installation instructions.

Wherever possible, we recommend that FM is installed in an audio rack or other suitable furniture that provides sufficient ventilation.

CONNECTIONS

Having verified that the ON/OFF switch is on OFF position, connect the mains lead provided to the rear of the unit and to the wall socket.

Connect the interconnect cable from the rear of FM to your amplifier input. Connect the Antenna input.

POWER UP

You may now turn on FM by switching the ON/OFF switch located at the back of the unit.

 
The central LED lights up indicating that the unit is in Standby mode. Press once on the **STANDBY** key of the unit. The display indicates:



FM TUNER FRONT PANEL

- **STAND-BY** : To switch the unit in and out of Standby mode. A red LED located below the central rotary control illuminates when in Standby mode.
- **MODE** : To Switch between modes.
- **MONO** : Switches reception between Mono and Stereo.
- **MEMORY** : To store pre-set stations.
- **SCANNING** : To place the unit into automatic station search mode.
- **SELECT** : To switch between Manual or Pre-set operation.
- **ROTARY CONTROL** : To access Frequency or Pre-set selection

DISPLAY




- On the left side the mode of operation, Manual or Pre-set.
- In the middle the lock indicator.
- On the right side the frequency in MHz
- In RDS mode, the name of the station on the full display.


MANUAL TUNING

Manual tuning is useful when you already know the frequency of the desired station.

 - Press once on **SELECT**. FM appears on the left side of the display indicating Manual mode.
- Turn the central rotary control to the desired frequency. During operation of the central rotary control, audio outputs will be muted.:



 - FM is factory preset with RDS function activated. Two seconds after locking on the selected station, the display will indicate the name of the station according to the RDS standard :




AUTOMATIC SEARCH (SCANNING)

Automatic search (scanning) allows you to scan the frequency band upwards (short press) or downwards (long press).

- Press on the **SCANNING** key (short or long press depending upon the desired scanning direction). FM will start to scan until it finds the next station of sufficient strength, whereupon the lock indicator will light.

 During search the display indicates:




If this is not a desired station, please repeat the operation..

PRESET STATIONS

Through the pre-set mode you can store and access up to 50 stations.

To store a station

 - Locate the station that you wish to store either by manual or scanning mode.
- Press once on the **MEMORY** key to open the memory. The display will indicate the first available pre-set (ex. : P05) or P- - should the memory be empty.




- Select the desired pre-set number (from 01 to 50) with the central rotary control.
- Press the **MEMORY** key to store your selection. Repeat this process to store your other selected stations.

Note : Any station that you store to an existing pre-set will automatically overwrite the previous stored station.

Access to pre-set stations

 - Press the **SELECT** key to access the pre-set mode.
- The display will indicate the pre-set number and the corresponding frequency:




- Turn the central rotary control to access the desired pre-set number.
- In order to return to manual mode, press the **SELECT** key.


MODE

The **MODE** key allows you to set up FM input sensitivity and to turn On or Off the RDS function.

 
- Press once on **MODE**. The display indicates :



 FM is set for the best reception with a cable antenna. If you are using an individual antenna it is recommended that you increase the input sensitivity of FM. During the 2 seconds while the display indicates :




 - Press once on **STANDBY**. The display indicates then:



This indication stays visible for 2 seconds while you can access the **LEVEL** indicator to find the best position for your antenna.

 - During the period when **ANTENNA** is displayed, press once on **STANDBY**. The display indicates then:



Move the antenna until you obtain the strongest possible signal. We recommend that you use a strong station for this purpose (ex BBC).

 
RDS Mode

FM is factory preset with RDS activated. If you do not wish to use this function you can de-activate it.


In **CABLE** mode, press twice on **MODE**.

In **ANTENNA** mode, press 3 times on **MODE**.

The display indicates :



 This indication stays visible for 2 seconds while you can press on **STANDBY** to de-activate this function. The display indicates then for 2 seconds :



You can activate this function at any time by following the same instructions as above.

FM is now fully set up.

Caractéristiques Audio.

Gamme d'ondes FM.....87.5 – 108MHz
 Sensibilité sous 75Ω
 Mono, 26dB S/B1.1µV
 Stéréo, 50dB S/B..... 45µV
 Sélectivité.....60dB à 300kHz
 THD Stéréo..... < 0.7%
 Bande Passante (±0.5dB)..... 30Hz – 15kHz

Alimentation

Consommation électrique : 10 W
 Fusible T 160mA / 250V (Temporisé)
 T 315mA / 130V (Temporisé)

Dimensions : (L x P x H mm) 430 x 300 x 70

Poids 4.0 kg

Typical Audio Performance

Wave range FM..... 87.5 – 108MHz
 Sensitivity at 75Ω
 Mono, 26dB S/B1.1µV
 Stereo, 50dB S/B..... 45µV
 Selectivity.....60dB at 300kHz
 Stereo THD < 0.7%
 Frequency range (±0.5dB).....30Hz – 15kHz

Power Supply

Power consumption 10 W
 Fuse type T 160mA / 250V (Slow Blow)
 T 315mA / 130V (Slow Blow)

Dimensions : (W x D x H mm)..... 430 x 300 x 70

Weight 4.0 kg

GARANTIE

Le tuner FM est garanti 2 ans à partir de la date d'achat.
 Si votre appareil nécessitait une intervention, vous devriez le ramener au revendeur auprès duquel vous aviez effectué votre achat, dans son emballage d'origine accompagné de la facture d'achat.
 La garantie couvre les vices de fabrication à l'exclusion de tout autre dommage tel que :
 - Un accident
 - Une négligence
 - Une erreur de manipulation
 - Une installation non conforme au présent manuel
 - Une intervention effectuée par des gens inhabilités
 - Les dégâts lors du transport (Les dégâts ne seront pris en compte par le transporteur qu'à condition d'avoir émis auprès de celui-ci les réserves d'usage lors de la livraison.)

ATTENTION : La garantie s'annule d'office si votre appareil n'est pas expédié dans son emballage d'origine ou si le numéro de série a été effacé ou changé.

Certificat de Garantie

Warranty Certificate

Cachet du Revendeur

Dealer's Stamp

Date d'Achat
 Purchase Date

N° de SERIE
 Serial NUMBER